

# WARRANTY INFORMATION (US/CANADA ONLY)

Creative Nail Design, Inc. (CND) warrants this UV Lamp to be free from defects in material and workmanship for one (1) year from the date of purchase. Void where prohibited. Warranty may be voided if lamp is not used according to CND's instructions for use and maintenance. The obligation of CND under this warranty shall be limited to replacement during the warranty period of any part that proves defective in material or workmanship provided that the proper SERVICE PROCEDURE has been followed as outlined below. This warranty of defects in materials or workmanship does not extend to normal wear and tear, any products or parts that have been lost or discarded by you, and it does not extend to defects in products or parts caused by misuse, accident, improper installation, or use in violation of instructions furnished by CND, or to units that have been altered or modified without CND's authorization. CND shall in no event be responsible for consequential damages of any nature or amount. CND reserves the right, at its absolute discretion, to determine the validity of any UV Lamp warranty claim. CND's decision shall be final.

## PURCHASER RESPONSIBILITY

As the purchaser of this UV lamp, your responsibility under the warranty is as follows:

- Register lamp by submitting warranty registration card to address below or visiting [cnd.com/UVLampWarranty](http://cnd.com/UVLampWarranty).
- Retain the dated purchase receipt.
- Notify CND within thirty (30) days of discovering a defect in materials or workmanship of UV Lamp.
- Follow Service Procedure outlined below.


**SERVICE PROCEDURE** (for U.S. and Canada only - if you purchased your UV Lamp outside the U.S. or Canada, contact the Seller for warranty service).

Should a defect in material or workmanship of the UV Lamp be discovered within one (1) year of purchase date, and not from any actions that would void the warranty, contact CND Customer Service at 1.800.833.NAIL within thirty (30) days of the discovered defect. You will be issued a Return Authorization Number. Send the defective UV Lamp, along with a copy of the original dated purchase receipt to:

CND (Creative Nail Design, Inc.)  
1125 Joshua Way  
Vista, CA 92081 USA  
Attn: UV Lamp Service Center

Once defect has been verified, the UV Lamp will be replaced free of charge. This process usually takes 2-4 weeks. Do NOT send the UV Lamp to CND prior to contacting Customer Service and receiving a Return Authorization Number. Any UV Lamp returned without the required Return Authorization Number may become lost and replacement may not be possible.

## Electronics CND UV LAMP Operating Instructions & Warranty Information

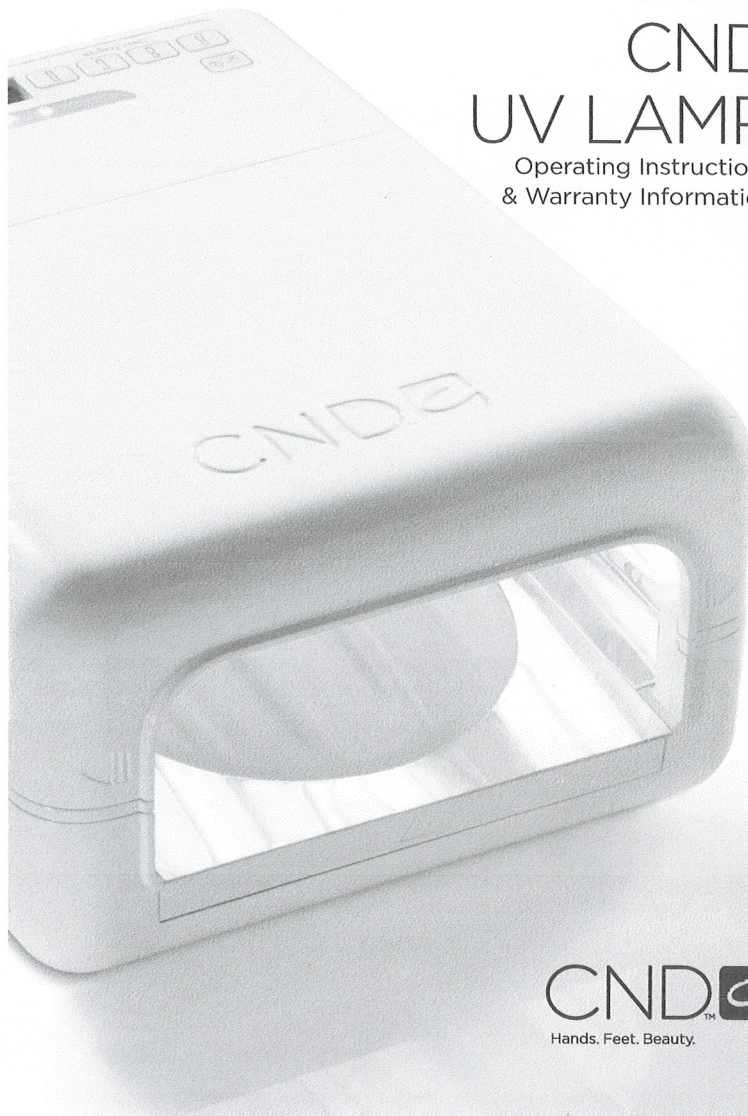

### FOR PROFESSIONAL USE ONLY.

Model #	08200/08203
Power Source:	110V AC, 60Hz
Power Consumption:	MAX: 60 Watts
Weight:	3.5 lbs
Dimensions:	Length: 10.75" Width: 7.75" Height: 4.5"

Model #	08201/08202/08204
Power Source:	240V AC, 50Hz
Power Consumption:	MAX: 130 Watts
Weight:	1.6 kg
Dimensions:	Length: 27cm Width: 19.5cm Height: 11.5cm



Hands. Feet. Beauty.

### Creative Nail Design, Inc.

1125 Joshua Way  
Vista, CA 92081 USA

1.760.599.2900

1.800.833.NAIL

[cnd.com](http://cnd.com)

©2010 Creative Nail Design, Inc.  
PN 780085-01 Art Rev. 10/08 #4943

CND  
Hands. Feet. Beauty.

# IMPORTANT SAFEGUARDS

Use this lamp only for its intended use, as described in this manual. When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:

## READ ALL INSTRUCTIONS BEFORE USING.

### ANGER:

To reduce risk of electrocution:

- Always unplug lamp after use.
- Do not use while bathing.
- Do not place lamp where it can fall or be pulled into a tub or sink.
- Do not place lamp in or drop into water or any other liquid.
- Do not reach for lamp if it has fallen into water or any other liquid. Unplug lamp immediately.


### WARNING:

To reduce risk of burns, electrocution, fire, or injury to persons:

- **UV radiation. DO NOT look directly at bulbs when illuminated.**
- Never leave lamp unattended when plugged in.
- A person having a history of skin problems should consult a physician before use.
- Medications or cosmetics applied to the skin may increase sensitivity to ultraviolet light.
- Close supervision is necessary when lamp is used on or near children or invalids.
- Lamp should be used only to cure UV nail products as directed by the nail product manufacturer.
- Misuse can result in overexposure.
- Overexposure can cause burns, premature skin aging, or eye injury.
- Overexposure should be avoided.
- Use only attachments recommended by this manufacturer.
- Never operate lamp if it has a damaged cord or plug, if it is not working properly, or it has been dropped, damaged or partially or fully submerged in water. Return lamp to our service center for examination and repair.
- Keep cord away from heated surfaces.
- Never block the air openings of the lamp or place the lamp on a soft surface, such as a bed or couch. Keep the air openings free of all debris.
- Never drop or insert objects into any opening in lamp.
- Never use lamp while sleeping or drowsy.
- Do not use lamp where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use outdoors.
- Store lamp and cord in a dry location away from heated surfaces.
- Before using lamp, wipe off any moisture. Always handle lamp with dry hands.
- Unplug lamp before cleaning.

SAVE THESE INSTRUCTIONS.

LAMP CONTROL PANEL

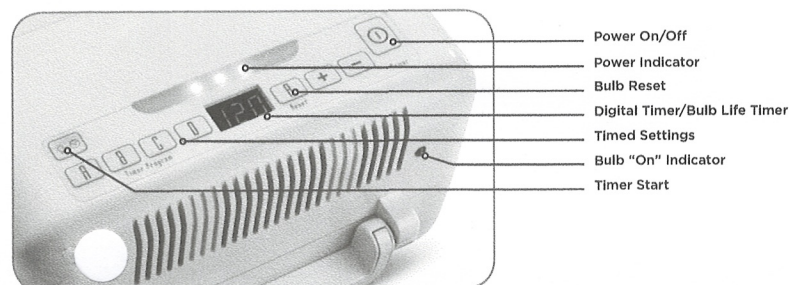

# OPERATING INSTRUCTIONS

The CND UV Lamp was specifically developed to produce consistently optimal levels of UV light for curing Brisa™ Gel and Shellac™. Four efficient, 9-watt bulbs are strategically positioned inside the lamp, allowing every nail to cure thoroughly and evenly.

This lamp has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

## IMPORTANT

Remove all protective film before using the CND UV Lamp for the first time. **REMOVE CLEAR FILM** from the outer shell of the entire lamp.

- Lift top cover/shell from lamp.
- Lift up hand tray and remove.
- **REMOVE BLUE FILM** from inside top lid, under hand tray and all inner areas.
- Replace hand tray and top cover.

## TURNING THE LAMP ON

- Plug lamp into outlet (three lights above LED window will be illuminated when plugged in properly).
- Push **POWER** button.
- Lamp is now ready for use.

## USING TIMED SETTINGS A-D

- The CND UV Lamp features 4 preset, programmable timer options. Preset times are: A = 10 seconds B = 60 seconds (1 min.) C = 120 seconds (2 min.) D = 180 seconds (3 min.). Press appropriate button for desired cure time.
- Timer will count down to zero and bulbs will automatically shut off.
- Press **Timer Start** button.
- **Bulb ON** indicator - red light at rear of lamp will indicate bulbs are on.

## CHANGING TIMED SETTINGS

- Press and hold button for timer you want to change (A-D) until 3 beeps sound and current value flashes. Press + or - to reach desired setting. When lamp beeps once and new value stops flashing, push button once to lock in new time.

## MAINTAINING LAMP

- Keep lamp dust free by unplugging lamp and wiping it down with an acetone-free, pre-moistened towelette to avoid exposing lamp to excess moisture.
- Do NOT use acetone to clean lamp or cord.
- To ensure optimal curing, bulbs should always operate at full power. Bulbs will last for 100 hours and all 4 should be replaced at the same time.

## CHECKING BULB LIFE USAGE


- Press **Bulb Reset** button at any time to display the number of bulb life hours remaining. Timer counts down from 100 hours to zero.

## REPLACING BULBS


- **CAUTION:** Bulbs are made of glass. Handle with care and allow to cool before replacing. **UNPLUG LAMP BEFORE REPLACING BULBS.**



1. Place lamp with one side facing you. Hold lamp base firmly with one hand, placing the other hand on the removable cover, with one or two fingers inside for leverage. Firmly pull on the cover - forward and slightly towards you, until it pops free.

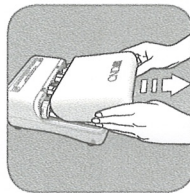

2. Pull lamp top up and forward to remove completely.

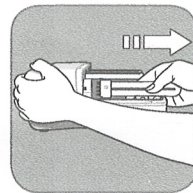

3. Firmly pull on each bulb to remove from its socket. Insert new bulbs by firmly pushing the end into each socket, ensuring it snaps all the way in. Gently replace the top and reset the Bulb Life Timer indicator (see below).

## RESETTING BULB LIFE TIMER

- After replacing all 4 bulbs, press **BULB RESET** button until the indicator starts flashing. Continue to press and hold until you hear 3 beeps and the number is reset to 100. This indicates the number of hours remaining on the bulbs.

## Note:

- CND UV Bulbs were custom-developed to provide high-quality, consistent UV output with optimal efficiency. Use only CND UV Lamp Bulbs to ensure optimal curing and perform

## PEDICURES