

OPI LED LAMP

ENGLISH

ENGLISH

WARRANTY

The OPI LED light is covered by a 1-year limited warranty. OPI warrants this product to the original purchaser to be free from defects in material and workmanship under normal use for a period of 1 year from date of purchase with the exception of the LEDs. During the warranty period, this product will be repaired or replaced at our option, without charge for either parts or labor at our repair/parts center. The warranty does not apply if product is misused, abused or altered. Without limiting the foregoing, dropping of unit, visible cracking or chipping of the OPI LED Light are presumed to be defects resulting from misuse or abuse. Warranty only applies if this product is used in accordance with the factory directions accompanying it.

TO RETURN LED LIGHT FOR REPAIR:

In USA:

If the OPI LED Light is not working properly due to being dropped or damaged or dropped into water, return the appliance to OPI for examination and repair. To return, carefully pack LED Light in a box and ship it to OPI Products Inc., 13034 Saticoy Street, N. Hollywood, CA 91605. Attn: Repair Department.

Export Markets – contact your local Authorized OPI Distributor.

SET UP AND GENERAL USE INSTRUCTIONS:

- Remove the LED Light from the box and place on manicure table with the open end facing the client.
- Remove any packing materials inside the light.
- Plug the power cord into a wall outlet, and the jack into one of the ports on the back of the LED Light.

CLEANING THE LED LIGHT:

- Disconnect the power cord from the wall outlet.
- Clean outside with N.A.S. 99.
- Disinfect Touch Pad by pre-cleaning with N.A.S. 99 and spraying with premixed OPI Spa Complete (dilution: 1/8 Oz. Spa Complete to 16 Oz. water; 10 minutes contact time.)
- Do not clean with abrasive cleansers or other scrubbing/scouring tools.

CAUTIONS

KEEP ALL PRODUCTS OUT OF THE REACH OF CHILDREN.

- Individuals who are sensitive to light due to fair skin color, or because of certain medications (Tetracyclines, Acutane, Sulfa drugs, etc.) should exercise due caution during exposure to this or any other light source, whether UV or visible.
- Heat sensation can occur due to individual sensitivity, and thickness of gel applied. Pulling fingers away from light source for a few seconds will cease the exothermic (heat-producing) reaction.
- If redness or burning results, discontinue use.
- Ultraviolet radiation from the sun or UV appliance can cause skin or eye damage.
- Skin may develop sunburn after overexposure.
- In cases of pronounced individual sensitivity or allergic reaction to ultraviolet radiation, medical advice is recommended before starting exposure.
- If power supply cord is damaged, it must be replaced by manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Appliance must not be used if the timer is faulty.
- Do not use any OPI products on nails that are infected, damaged, weak or thin, have been bitten deep into the nail bed, or are surrounded by sore or inflamed cuticles.
- Discontinue use if sensitization occurs – may cause allergic reaction in certain persons.
- If accidental eye contact occurs, flush with water for 15 minutes and get proper medical attention as soon as possible.
- Keep away from heat and open flame. Exercise due cautions.
- Avoid inhalation or ingestion and prolonged contact with skin.
- If taken internally, get immediate medical attention.
- If gels are spilled on skin, wipe off with N.A.S. 99 and then wash with mild soap and water.
- If gels are spilled on clothing, wipe off with N.A.S. 99 and then wash with mild soap and water.

PLEASE NOTE THESE WARNINGS

**FOR PROFESSIONAL USE ONLY.
NOT FOR RETAIL SALE OR HOME USE.
READ ALL INSTRUCTIONS BEFORE USE.**

Use only with recommended OPI gels. OPI is not responsible for results when used with other gel brands.

REVIEW THESE INSTRUCTIONS

Model #: GC 900
Power Source: 29.4 Volts DC
Power Consumption: Max. 40 Watts
Weight: Approximately 3 lbs.
Dimensions: Width – 9"
 Depth – 8.5"
 Height – 3.5"

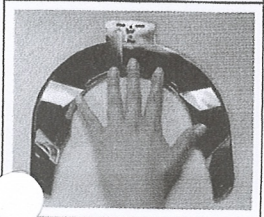
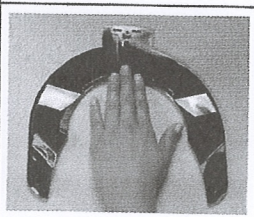
BEFORE USING:

- Plug the power cord into either port located on the back of the LED Light.
- Select cure setting.

PROPER HAND PLACEMENT:

- Slide hand into light, then spread fingers.
- Light automatically comes on when middle finger touches plate sensor.

Remind your client of the proper hand position each time she puts her hand in the light.

CORRECT HAND POSITION	INCORRECT HAND POSITION
<p>IMPORTANT: Slide hand into light, then spread fingers.</p>	
	

Note: Heat sensation can occur due to individual sensitivity, and thickness of gel applied. Pulling fingers away from light source for a few seconds will cease the exothermic (heat-producing) reaction.

IMPORTANT SAFETY INSTRUCTIONS:

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including:

**READ ALL INSTRUCTIONS BEFORE USE
KEEP AWAY FROM WATER**

**DANGER – TO REDUCE RISK OF
ELECTROCUTION:**

- Do not leave appliance plugged in for an extended period of time when not in use.
- Do not place or store appliance where it will fall or be pulled into a tub or sink.
- Do not use while bathing.
- Do not place in, or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Unplug before cleaning.
- The OPI LED light should only be used with the AC-adaptor provided.

**WARNING – TO REDUCE THE RISK OF
BURNS, ELECTROCUTION, FIRE, OR
INJURY TO PERSONS:**

- Never leave appliance unattended when in use.
- Appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- UV appliances are not to be used by children and young adolescents.
- Close supervision is necessary when appliance is used by, on, or near children or invalids.
- Use this appliance only for its intended use as described in this brochure. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug.
- Keep cord away from heated surfaces.
- Never block appliance air openings or place it on a soft surface such as a bed or couch where the air openings might be blocked. Keep air openings free of lint, hair and the like.
- Never drop or inset any object into any opening of the appliance.
- Do not use outdoors or operate where aerosol (spray) products are being used.
- Do not look directly at bulbs when light is on.
- Use Light only as intended and as described in the instructions.

SERIAL NUMBER:
Numéro de Série:

G 103040

WARRANTY CARD ENCLOSED

Carte de Garantie Incluse / Tarjeta de Garantía Incluida / Garantiekarte ist beigelegt

REMINDER: RAPPEL / RECUERDE / ZUR ERINNERUNG:

Don't forget to register your light.
N'oubliez pas d'enregister votre lampe.
No olvide de registrar su luz.
Vergessen sie bitte nicht Ihre licht registrieren zu lassen.

Attention: Purchaser

Attention: Acheteur / Atención: Comprador / Wichtig für den Käufer:

Please fill in and mail the White/Registration Card to OPI Products Inc., within 10 days of purchase.
Retain the Blue Limited Warranty Card for your records.

Remplir SVP et envoyer par mail la Garantie Blanche/Carte Enregistrement à
OPI Products Inc., dans les 10 jours suivant l'achat.

Por favor llene y envíe la Tarjeta de Registro/Garantía de color Blanco a OPI Productos Inc.,
dentro de los 10 días de compra. Retenga la Tarjeta de Garantía Limitada de color Azul para sus registros.

Füllen Sie die Garantie/Registrierkarte aus und senden Sie sie innerhalb von 10 Tagen nach dem Kauf an
OPI Products Inc. Bewahren Sie die blaue eingeschränkte Garantiekarte mit Ihren Kaufunterlagen auf.

O·P·I

