

CND  LED

3C TECHNOLOGY  
COMPLETE CHROMATIC CURE



OPERATING INSTRUCTIONS & WARRANTY INFORMATION  
INSTRUCCIONES DE OPERACIÓN E INFORMACIÓN SOBRE LA GARANTÍA  
MODE D'EMPLOI & INFORMATIONS SUR LA GARANTIE  
BETRIEBSANLEITUNGEN & GEWÄHRLEISTUNGSINFORMATIONEN  
ISTRUZIONI OPERATIVE E INFORMAZIONI SULLA GARANZIA  
ИНСТРУКЦИИ ПО ЭКСПЛУАТАЦИИ И ИНФОРМАЦИЯ О ГАРАНТИИ  
HƯỚNG DẪN SỬ DỤNG & THÔNG TIN BẢO HÀNH

## ENGLISH

### 3C TECHNOLOGY™

Optimizes light, time and energy for maximum shine and lasting durability across a full spectrum of colors.

- Two light beams target long wear and shine
- Energy adjusts for each service step
- Time controlled pulsing for a precision cure

#### CND™ LED LAMP DESIGN FEATURES:

- Targeted exposure to the nail area
- Easy-to-use preset controls for each service step
- Alignment guides for proper hand/foot placement
- Patent-pending, ergonomic design
- Uniform drying
- Cures in half the time\*
- 5 finger cure
- Pedicure friendly
- One year warranty
- No bulb replacement
- Acetone resistant
- No assembly required
- Removable power cord

\*Compared to current CND™ UV Lamp.

#### IMPORTANT SAFEGUARDS

Use this lamp only for its intended use, as described in this manual. When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:

#### READ ALL INSTRUCTIONS BEFORE USING.

#### DANGER:

To reduce risk of electrocution:

- Always unplug lamp after use.
- Do not use while bathing.
- Do not place lamp where it can fall or be pulled into a tub or sink.
- Do not place lamp in or drop into water or any other liquid.
- Do not reach for lamp if it has fallen into water or any other liquid. Unplug lamp immediately.

#### WARNING:

To reduce risk of burns, electrocution, fire, or injury to persons:


- Never leave lamp unattended when plugged in.
- Do not look directly at bulbs to avoid eye strain from external lighting.
- Medications or cosmetics applied to the skin may increase sensitivity to ultraviolet light.
- Lamp should be used only to cure nail products as directed by the nail product manufacturer.
- Misuse can result in overexposure.
- Overexposure can cause burns, premature skin aging, or eye injury.
- Overexposure should be avoided.
- Use only attachments recommended by this manufacturer.
- Never operate lamp if it has a damaged cord or plug, if it is not working properly or it has been dropped, damaged or partially or fully submerged in water. Return lamp to our service center for examination and repair.
- Keep cord away from heated surfaces.
- Never block the air openings of the lamp or place the lamp on a soft surface, such as a bed or couch. Keep the air openings free of all debris.
- Never drop or insert objects into any opening in lamp.
- Never use lamp while sleeping or drowsy.
- Do not use lamp where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use outdoors.
- Store lamp and cord in a dry location away from heated surfaces.
- Before using lamp, wipe off any moisture. Always handle lamp with dry hands.
- Unplug lamp before cleaning.
- The detachable power supply cord is only to be used with the unit provided.

# SAVE THESE INSTRUCTIONS


## OPERATING INSTRUCTIONS

### TURNING THE LAMP ON


- Plug cord into the base of the lamp.
- Plug lamp into outlet.
- Turn on Power button (the timer will be illuminated once the lamp is on).
- Lamp is now ready for use.

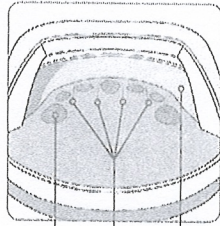


Alignment Guides  
Fingertip Pads  
Front Wall

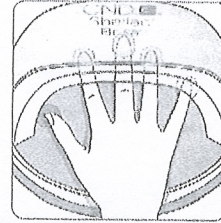

**MANICURE PLACEMENT:** Place client's hand so that fingers are centered within the alignment guides on the bottom of the lamp. Ensure fingers are in the fingertip pads. Thumb should be resting in the appropriate thumb pad; all other fingers will follow. For longer nails, move the hand slightly back.

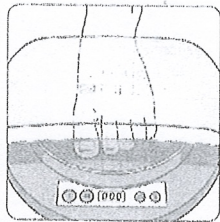

**PEDICURE PLACEMENT:** Place client's foot into the center of the lamp between the outside alignment guidelines, 1/2 inch (1.27cm) away from front reflective wall. Clean lamp in between each service.

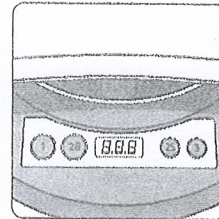

BUTTON PAD

## USING PRESET CONTROLS

- The CND™ LED Lamp features 4 preset controls calibrated to perfectly cure CND™ SHELLAC™ and BRISA™.
- Select appropriate button based on service being performed.
- Timer will count down to zero, you will hear a beeping sound, and bulbs will automatically shut off.

1	2B	2S	3
UNIVERSAL BASE COAT	BRISA™ AND BRISA™ LITE	CND™ SHELLAC™	UNIVERSAL TOP COAT
BRISA™Bond BRISA™Lite Removable Base Coat CND™ SHELLAC™ Base Coat	BRISA™Sculpting Gel BRISA™Paint BRISA™Lite Sculpting Gel BRISA™Lite Smoothing Gel	All CND™ SHELLAC™ Color Coats	BRISA™Gloss BRISA™Lite Removable Top Coat CND™ SHELLAC™ Top Coat CND™ SHELLAC™ XPRESS5™ Top Coat
10 SECONDS	60 SECONDS (1 MINUTE)	60 SECONDS (1 MINUTE)	60 SECONDS (1 MINUTE)

For best service results, ensure proper P.E.P. of nails.

---

## SHELLAC™

- Apply a thin layer of SHELLAC™ Base Coat to all five nails. Seal extension edge. Cure using button 1.
- Apply a thin layer of SHELLAC™ Color Coat. Seal extension edge. Cure using button 2S. Repeat this step.
- Apply a thin layer of SHELLAC™ XPRESS™ Top Coat to all five nails. Seal extension edge. Cure using button 3.
- Remove the top film (sticky inhibition layer) with a plastic-backed, lint-free pad soaked with 99% Isopropyl Alcohol (IPA).

---

## BRISA™

- Apply a thin layer of BRISA™ Bond to all five nails. Seal extension edge. Cure using button 1.
- Create your nail enhancement on all five fingers using BRISA™ Sculpting Gels and/or BRISA™ Paint, curing after each individual product application by using button 2B. Repeat this step as needed.
- Apply a thin layer of BRISA™ Gloss to all five nails. Seal extension edge. Cure using button 3.
- Remove the top film with a plastic-backed, lint-free pad soaked with 99% Isopropyl Alcohol (IPA).

---

## BRISA™ LITE

- Apply a thin layer of BRISA™ Lite Removable Base Coat to all five nails. Seal extension edge. Cure using button 1.
- Create your nail enhancement on all five fingers using BRISA™ Lite Smoothing Gel and/or BRISA™ Lite Sculpting Gel, curing after each individual product application by using button 2B. Repeat this step as needed.
- Apply a thin layer of BRISA™ Lite Removable Top Coat to all five nails. Seal extension edge. Cure using button 3.
- Remove the top film with a plastic-backed, lint-free pad soaked with 99% Isopropyl Alcohol (IPA).

---

## MAINTAINING THE LAMP:

- Keep lamp dust free by unplugging lamp and wiping it down with a pre-moistened towelette to avoid exposing lamp to excess moisture.

---

## WARRANTY INFORMATION (US / CANADA ONLY)

Creative Nail Design, Inc. (CND™) warrants this LED Lamp to be free from defects in material and workmanship for one (1) year from the date of purchase. Void where prohibited. Void when lamp is not purchased via recognized CND™ distributors. Warranty may be voided if lamp is not used according to CND™ instructions for use and maintenance.

The obligation of CND™ under this warranty shall be limited to replacement during the warranty period of any part that proves defective in material or workmanship provided that the proper Service Procedure has been followed as outlined below.

This warranty of defects in materials or workmanship does not extend to normal wear and tear, any products or parts that have been lost or discarded by you, and it does not extend to defects in products or parts caused by misuse, accident, improper installation, or use in violation of instructions furnished by CND™, or to units that have been altered or modified without CND™'s authorization. CND™ shall in no event be responsible for consequential damages of any nature or amount. CND™ reserves the right, at its absolute discretion, to determine the validity of any LED Lamp warranty claim. CND™'s decision shall be final.

---

## PURCHASER RESPONSIBILITY

As the purchaser of this LED lamp, your responsibility under the warranty is as follows:

- Register lamp by visiting [CND.com/LEDLampWarranty](http://CND.com/LEDLampWarranty).
- Retain the dated purchase receipt.
- Notify CND™ within thirty (30) days of discovering a defect in materials or workmanship of the LED Lamp.
- Follow Service Procedure as outlined below.

---

## U.S. AND CANADA - SERVICE PROCEDURE

Should a defect in material or workmanship of the CND™ LED Lamp be discovered within one (1) year of purchase date, and not from any actions that would void the warranty, contact CND™ Customer Service at 1.800.833.NAIL within thirty (30) days of the discovered defect.

Once the defect has been verified, the LED Lamp will be replaced free of charge. This process usually takes 2-4 weeks. Do NOT send the LED Lamp to CND™ prior to contacting Customer Service and receiving a Return Authorization Number. Any LED Lamp returned without the required Return Authorization Number may become lost and replacement may not be possible.

---

## OUTSIDE OF THE U.S. AND CANADA - SERVICE PROCEDURE

If you purchased your CND™ LED Lamp outside the U.S. or Canada, contact the seller for warranty service.